Main

# soft starter-ATS22-control 220V-power 230V(37kW)/400...440V(75kW)

Commercial Status	Commercialised
Range of product	Altistart 22
Product or component type	Soft starter
Product destination	Asynchronous motors
Product specific application	Severe and standard applications
Component name	ATS22
Network number of phases	3 phases
Power supply voltage	230440 V (- 1510 %)
Motor power kW	75 kW at 440 V 75 kW at 400 V 37 kW at 230 V
Factory setting current	131 A
Power dissipation in W	82 W for standard applications
Utilisation category	AC-53A
Type of start	Start with torque control (current limited to 3.5 ln)

dard applications

IP00

140 A (connection in the motor supply line) for stan-

#### Complementary

Complementary	
Assembly style	With heat sink
Function available	Internal bypass
Power supply voltage limits	195484 V
Power supply frequency	5060 Hz (- 1010 %)
Network frequency	4566 Hz
Device connection	In the motor supply line To the motor delta terminals
Control circuit voltage	220230 V -1510 % at 50/60 Hz
Control circuit consumption	20 W
Discrete output number	2
Discrete output type	(R2)Relay outputs 230 V running, alarm, trip, stopped, not stopped, starting, ready, C/O (R1)Relay outputs 230 V running, alarm, trip, stopped, not stopped, starting, ready, C/O
Minimum switching current	Relay outputs 100 mA at 12 V, DC
Maximum switching current	Relay outputs 2 A at 30 V, DC inductive load, L/R = 7 ms Relay outputs 2 A at 250 V, AC inductive load, cos phi = 0.4, L/R = 20 ms Relay outputs 5 A at 30 V, DC resistive load, cos phi = 1 Relay outputs 5 A at 250 V, AC resistive load, cos phi = 1
Discrete input number	3
Discrete input type	(LI1, LI2, LI3)logic 5 mA 4.3 kOhm
Discrete input voltage	24 V (<= 30 V)
Discrete input logic	(LI1, LI2, LI3)positive logic state 0 < 5 V and < 2 mA state 1 > 11 V and > 5 mA
Output current	0.41 lcl adjustable
PTC probe input	750 Ohm
Communication port protocol	Modbus
Connector type	1 RJ45
Communication data link	Serial

Icl nominal current

IP degree of protection

Physical interface	RS485 multidrop	
Transmission rate	4800, 9600 or 19200 bps	
Max nodes number	31	
Protection type	Thermal protection on starter Thermal protection on motor Phase failure on line	
Marking	CE	
Type of cooling	Forced convection	
Operating position	Vertical +/- 10 degree	
Height	356 mm	
Width	150 mm	
Depth	229.5 mm	
Product weight	18 kg	

## Environment

Electromagnetic compatibility	Voltage/Current impulse conforming to IEC 61000-4-5 level 3 Immunity to radiated radio-electrical interference conforming to IEC 61000-4-3 level 3
	Immunity to electrical transients conforming to IEC 61000-4-4 level 4 Electrostatic discharge conforming to IEC 61000-4-2 level 3 Damped oscillating waves conforming to IEC 61000-4-12 level 3 Conducted and radiated emissions conforming to IEC 60947-4-2 level A
Standards	EN/IEC 60947-4-2
Product certifications	CCC CSA C-Tick GOST UL
Vibration resistance	1.5 mm (f = 213 Hz) conforming to EN/IEC 60068-2-6 1 gn (f = 13200 Hz) conforming to EN/IEC 60068-2-6
Shock resistance	15 gn for 11 ms conforming to EN/IEC 60068-2-27
Noise level	56 dB
Pollution degree	Level 2 conforming to IEC 60664-1
Relative humidity	<= 95 % without condensation or dripping water conforming to EN/IEC 60068-2-3
Ambient air temperature for operation	> 40< 60 °C with current derating 2.2 % per °C -1040 °C without derating
Ambient air temperature for storage	-2570 °C
Operating altitude	> 1000< 2000 m with current derating of 2.2 % per additional 100 m <= 1000 m without derating

# RoHS compliance

RoHS EUR status	Compliant
RoHS EUR conformity date(YYWW)	0938


# Contractual warranty

Period 18 months
------------------



#### Frame Size C

#### Dimensions

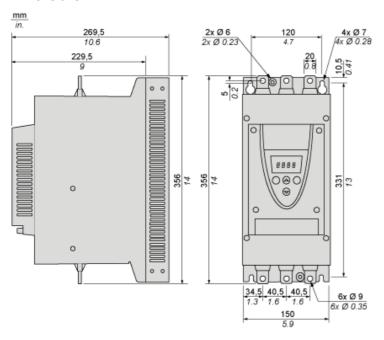

#### **Precautions**

#### Standards

The Altistart 22 soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.

For environment pollution degree 3, install the Altistart 22 soft starter inside a cabinet type 12 or IP54.

#### **▲** DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

#### Air Circulation

Leave sufficient free space to help the air required for cooling purposes to circulate from the bottom to the top of the unit.

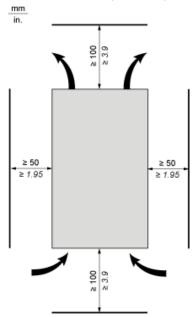


#### Overheating

To avoid the soft starter to overheat, respect the following recommendations:

- Mount the Altistart 22 Soft Starter within ± 10° of vertical.
- Do not locate the Altistart 22 Soft Starter near heat radiating elements.
- Electrical current through the Altistart 22 Soft Starter will result in heat losses that must be dissipated into the ambient air immediately surrounding the soft starter. To help prevent a thermal fault, provide sufficient enclosure cooling and/or ventilation to limit the ambient temperature around the soft starter.
- If several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter can adversely affect the ambient temperature around the top soft starter.

#### Mounting

#### Connection Between the Fan and the Altistart 22 Soft Starter

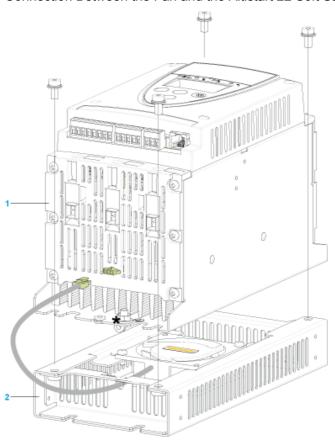

- 1 Altistart 22 Soft Starter
- 2 Fan

## Wall mounted or Floor-standing Enclosure with IP 23 Degree of protection

 
#### Introduction

To help proper air circulation in the soft starter, grilles and forced ventilation can be installed.

#### Ventilation Grilles



#### Forced Ventilation Unit



#### **Power Terminal**

#### Bar Style




Power supply and output to motor	Bar	b	20 mm (0.79 in)
а	5 mm (0.2 in)		
Bolt	M8 (0.31 in)		
Cable and protective cover	Size	95 mm²	
Gauge	250 MCM		
Protective cover	LA9F702		
Tightening torque	18 N.m		
157.5 lb.in			

#### Power connections, minimum required wiring section


IEC cable	UL cable
mm² (Cu 70°C/158°F) (1)	AWG (Cu 75°C/167°F) (1)
50	2/0

#### 230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control

## With Line Contactor, Freewheel or Controlled Stop

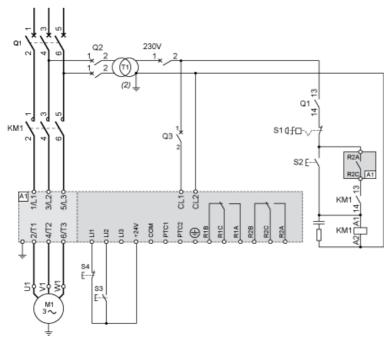

230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

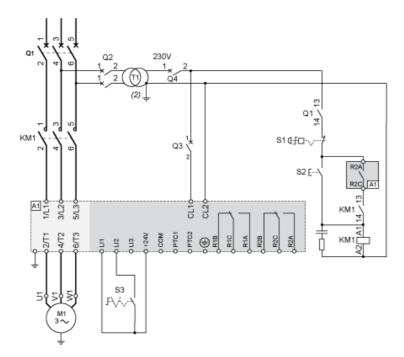


#### Connection in the motor delta winding in series with each winding

#### Wiring

ATS22 soft starters connected to motors with the delta connections can be inserted in series in the motor windings.

The following wiring requieres particular attention. It is documented in the Altistart 22 Soft start - soft stop unit user manual. Please contact Schneider Electric commercial organisation for further informations.

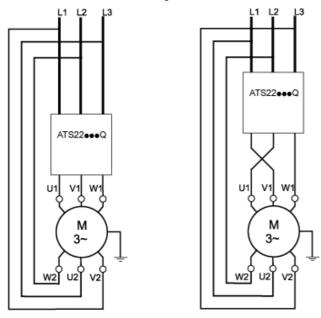


#### Example

A 400 V - 110 kW motor with a line current of 195 A (nominal current for the delta connection). The current in each winding is equal to 195/1.5 or 130 A. The rating is determined by selecting the soft starter with a permanent nominal current (ICL) just above this current.

#### Motor Thermal Protection - Cold Curves

#### Curves

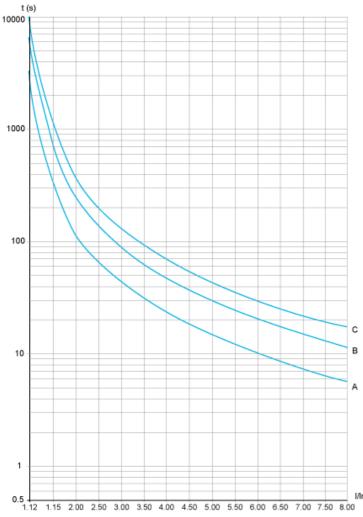

A Class 10

B Class 20 C Class 30

## Trip time for a Standard Application (Class 10)

3.5 ln

Trip time for a Severe Application (Class 20)

3.5 ln 63 s


32 s

Trip time for a Severe Application (Class 30)

3.5 ln

95 s

#### Curves

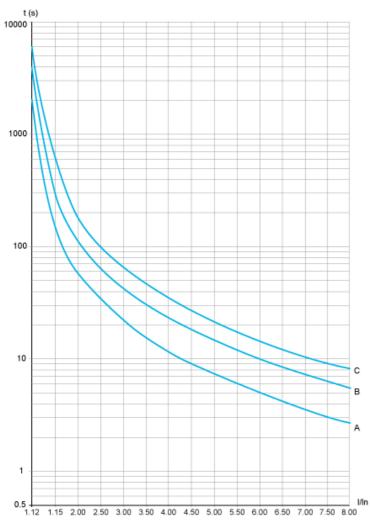

- Class 10 Class 20 A B C
- Class 30

## Trip time for a Standard Application (Class 10)

3.5 ln	
16 s	

## Trip time for a Severe Application (Class 20)

3.5 ln	
32 s	

# Trip time for a Severe Application (Class 30)

3.5 ln	
48 s	