



Operator terminal

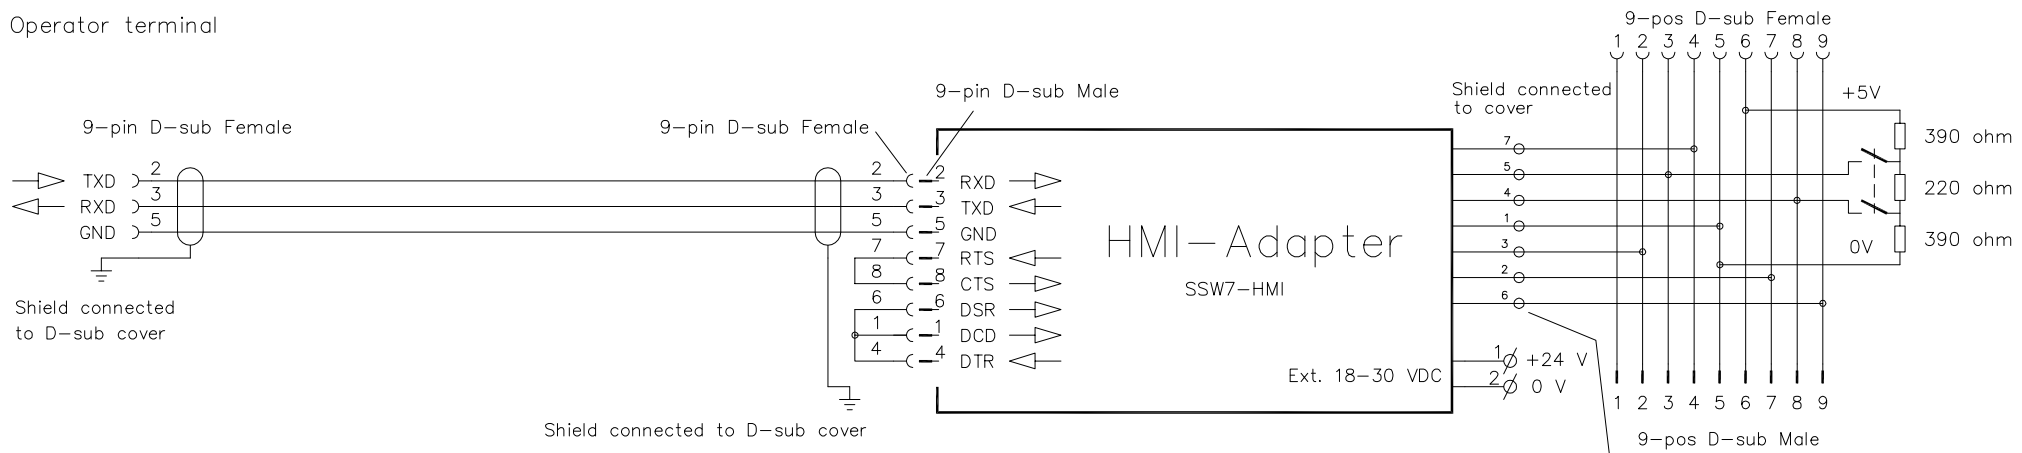

The SSW7-HMI is normally powered from the PLC. If 24V not are available from the PLC or if several SSW7-HMI are connected to a PLC at same time, 24V can be fed from an external source.

LED1 off: The SSW7-HMI has no power or is faulty.
 LED1 on: The SSW7-HMI is being powered.
 LED2 on: The SSW7-HMI registered in the MPI network.
 LED3 on: The SSW7-HMI has established a connection.
 LED3 flashing: The SSW7-HMI is transmitting data.

Operator terminal

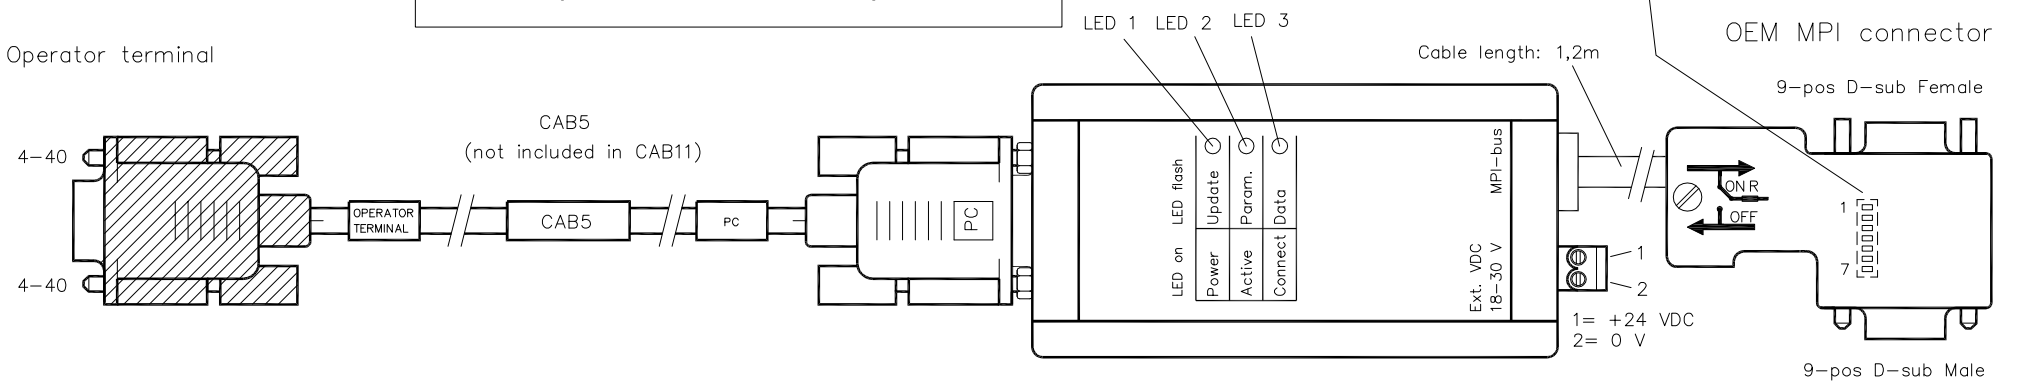

| | | | | | | | | | |
|----|--|--------|------------|------|----------|---------------|------|-----------|-------------|
| | | CAB 11 | | | | | | | |
| | | Drawn | Date | App. | Revision | Revision date | Page | Next page | Drawing No. |
| A3 | | NON | 2004-05-11 | | NEL | 2007-04-16 | 1 | - | K-03359 |