

TeSys H

Motor Starter

User Guide

08/2015



The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2015 Schneider Electric. All rights reserved.

Table of Contents



	Safety Information	5
	About the Book	7
Chapter 1	Presentation	9
	Introduction	10
	Description	11
	Protection Functions	12
Chapter 2	Motor Control Applications	15
	Motor Control Using a Standard TeSys H Motor Starter	16
	Recommended Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter	17
	Additional Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter	21
	Motor Control Using a Standard or STO Motor Starter for Motors with Brake	23
Chapter 3	Operation	25
	Commissioning	26
	Diagnostic Functions	28
	Resetting the TeSys H Motor Starter	30
	Protecting the Environment	31
Appendices	33
Appendix A	Combining the TeSys H Motor Starter with Circuit Breakers or Fuses	35
	Combining the TeSys H Motor Starter with Circuit Breakers	36
	Combining the TeSys H Motor Starter with Fuses	38
Appendix B	Technical Data	39
	Technical Data	40
	Safety Functions	43
Appendix C	Tripping and Derating Characteristics	45
	Tripping Characteristics	46
	Derating Characteristics	47
	Maximum Operating Rate for AC53A Duty	48



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

This document describes the control functions of the TeSysTMH motor starter.


This document is intended for the following users:

- Design engineers
- System integrators
- System operators
- Maintenance engineers

Validity Note

The characteristics presented in this document should be the same as those that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Safety Information

 DANGER	
HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH	
To prevent short circuit between primary and secondary sides:	
<ul style="list-style-type: none">• Disconnect all power before servicing equipment.• Only use power supply units with safe isolation and PELV, according to EN 50178/VDE 0160 (PELV).	
Failure to follow these instructions will result in death or serious injury.	

Related Documents

Title of Documentation	Reference Number
TeSys H Instruction Sheet	NHA6215000

You can download these technical publications and other technical information from our website at <http://download.schneider-electric.com>

Trademark Notice

All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.

Chapter 1

Presentation

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	10
Description	11
Protection Functions	12

Introduction

Presentation of the TeSys H Motor Starter

At only 22.5 mm wide, the TeSys H is an ultra-compact motor starter.

Using hybrid technology that combines electromechanical relays, power solid-state components, and a solid-state overload function, the TeSys H motor starter controls and protects three-phase motors up to 3 kW/500 V or resistive loads up to 9 A/500 V.

NOTICE

FALSE-TRIP HAZARD ON NON-SINUSOIDAL THREE-PHASE VOLTAGES

Do not use the TeSys H motor starter on the power side or load side of a variable speed drive or soft starter.

Failure to follow this instruction can result in false trip.

NOTICE

FALSE-TRIP HAZARD ON SINGLE-PHASE VOLTAGE

Do not use the TeSys H motor starter to control and protect single-phase loads.

Failure to follow this instruction can result in false trip.

Product Range

The following table shows the features available in the product range.

Feature	Value	LZ1H	LZ2H	LZ7H	LZ8H
IEC rating	2.4 A/AC53A, 2.4 A/AC51	x	x	x	x
	6.5 A/AC53A, 9 A/AC51	x	x	x	x
Control voltage	24 Vdc	x	x	x	x
	110 V–230 Vac	x	x	x	x
Type of terminal	Screw	x	x	x	x
	Spring	x	x	x	x
Functions	One direction	x	–	x	–
	Two directions	–	x	–	x
	Overload protection	x	x	x	x
	Safe Torque Off (STO)	–	–	x	x

Motor Control

The TeSys H motor starter is used to switch on and switch off three-phase, asynchronous electrical motors used in single-direction or dual-direction applications. The TeSys H motor starter protects the motors against overheating.

Applications

The TeSys H motor starter cannot be used with single-phase motors, or with three-phase motors on the power side or load side of a variable-speed drive or soft starter.

Safe Torque Off (STO)

STO TeSys H motor starters LZ7H and LZ8H are designed for use in safety chain applications.






Safety shutdown can be achieved to the following standards:

- SIL3 according to IEC61508-1
- PLe according to ISO13849-1

TeSys H motor starters LZ7H and LZ8H are ATEX certified as associated components for motor protection.

Description

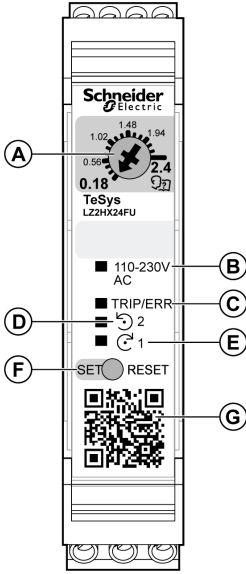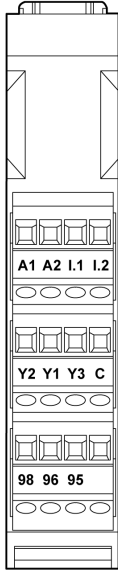Hardware Description


Product face	Control terminals	Power terminals
		
<p>A: Potentiometer to adjust nominal current:</p> <ul style="list-style-type: none"> ● 0.18 to 2.4 for 2.4 A devices ● 1.5 to 9 for 6.5 A devices <p>B: Auxiliary power supply LED (green), 24 Vdc or 110-230 Vac</p> <p>C: TRIP/ERR trip or internal error LED (red)</p> <p>D: LED  input I.2 status (yellow). On LZ2H and LZ8H only.</p> <p>E: LED  input I.1 status (yellow)</p> <p>F: SET/RESET button: Set/manual reset</p> <p>G: Product information QR code</p>	<p>A1, A2: Auxiliary power supply</p> <p>I1: Control input, direction 1 I2: Control input, direction 2. On LZ2H and LZ8H only.</p> <p>Y1: Common point for reset mode Y2: Remote reset mode Y3: Automatic reset mode</p> <p>C: Common point for control inputs. On LZ7H and LZ8H only.</p> <p>98, 96, 95: Trip and error signaling contact</p>	<p>2/T1, 4/T2, 6/T3: Motor connection</p> <p>1/L1, 3/L2, 5/L3: Power inputs</p> <p>H: Lock for fixing on DIN rail</p>





Protection Functions


Thermal Overload

The TeSys H motor starter protects three-phase motors against overload. If the current exceeds the set value, the motor starter switches off within the specified tripping time (*see page 45*) and indicates the cause of the trip through the **TRIP/ERR** LED and the trip and error signaling contact.

NOTE: Overload protection of LZ7H and LZ8H STO starters is ATEX-certified up to SIL 2.

NOTE: Only LZ7H and LZ8H motor starters that bear the  marking on the left can be used to protect motors in an explosive atmosphere.

 DANGER
<p>HAZARD OF EXPLOSION IN EXPLOSIVE ATMOSPHERE</p> <ul style="list-style-type: none"> • The device is associated equipment and must not be installed in potentially explosive areas. When installing and operating associated equipment, the applicable safety directives must be observed. • Observe the safety regulations that are applicable when motors are used in the Ex area (ATEX directive 94/9/EC). • In circuits in potentially dust-explosive areas of zones 21 and 22, it must be guaranteed that the equipment connected to this circuit complies with category 2D or 3D or is certified as such. • For safety technical data, please refer to this document and certificates (EC-type examination certificate, and other approvals if appropriate). • Conformance/approvals: <ul style="list-style-type: none"> • EC type-examination certificate •  II (2) G [Ex e] [Ex d] [Ex px] •  II (2) D [Ex t] [Ex p] • PTB certification: refer to file number on product nameplate •  marked devices only <p>Failure to follow these instructions will result in death or serious injury.</p>

 WARNING
<p>RISK OF INADEQUATE MOTOR PROTECTION</p> <p>The current setting of the TeSys H motor starter must be adapted in accordance with the motor to be protected.</p> <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Phase Unbalance

The TeSys H motor starter protects three-phase motors against phase unbalance.

If motor currents differ from each other by more than:

- 33%, the motor starter switches off in 2 min and indicates the cause of the trip through the **TRIP/ERR** LED
- 67%, the motor starter switches off in 1.8 s and indicates the cause of the trip through the **TRIP/ERR** LED

Phase Loss

The TeSys H motor starter protects three-phase motors against phase loss.

Depending on when the phase loss occurs, the motor starter signals the phase loss and responds as described in the following table.

State of the motor starter when phase loss occurs	Standard motor starters LZ1H/LZ2H	STO motor starters LZ7H/LZ8H
Ready to start	The motor starter switches off after 1.5 s.	The motor starter switches on and then switches off after 1.5-2 s.
Running	The motor starter switches off after 1.5-2 s.	The motor starter switches off after 1.5-2 s.

Phase loss is indicated by the **TRIP/ERR** LED and the trip signaling contact.

Stall and Jam Detection

The TeSys H motor starter protects three-phase motors against the following events:

- Jam during startup
- Stall during running

If the current exceeds 45 A for more than 2 s, the TeSys H motor starter switches off and indicates the cause of the trip through the **TRIP/ERR** LED and trip signaling contact.

Diagnostic Functions

The following errors are detected by the TeSys H motor starter:

- Two or more phases are missing.
- No motor is connected.
- On at least two phases, the motor current is lower than the minimum configurable current for more than 2 s.

Chapter 2

Motor Control Applications

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Motor Control Using a Standard TeSys H Motor Starter	16
Recommended Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter	17
Additional Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter	21
Motor Control Using a Standard or STO Motor Starter for Motors with Brake	23

Motor Control Using a Standard TeSys H Motor Starter

Overview

NOTICE

DAMAGE TO MOTOR


Connect the TeSys H motor starter as specified in the wiring diagrams.

Failure to follow these instructions can result in equipment damage.

This section provides an example circuit for a DOL motor, using an LZ1H or LZ2H, non-STO, TeSys H motor starter.

Three-Phase Motor Without Brake

This example wiring diagram is for a 3-phase motor without a brake.

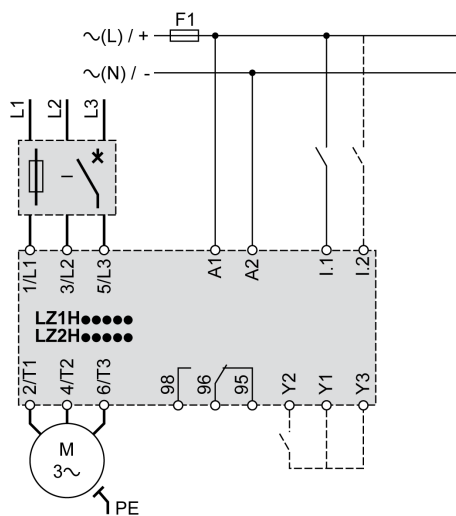

Recommended Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter

Overview

NOTICE

DAMAGE TO MOTOR

Connect the TeSys H motor starter as specified in the wiring diagrams.

Failure to follow these instructions can result in equipment damage.

This section provides recommended circuits for safe shutdown of motors that use an STO TeSys H motor starter. In recommended circuits, shutdown is achieved by interrupting the control input on **I1** or **I2**.

The circuits in this section are for applications where safe shutdown is a normal operating state, such as guard door applications and two-hand control applications.

The following shutdown applications are included in this section:

- Dual-channel applications with a TM3SAC safety processing device ([see page 17](#))
- Dual-channel applications with a TM3SAF53 safety processing device ([see page 18](#))
- Dual-channel input and single-channel output with an XPSAC safety processing device ([see page 18](#))
- Dual-channel input and dual-channel output with an XPSAF safety processing device ([see page 19](#))
- Dual-channel and XPSMCM modular safety controller ([see page 19](#))
- Dual-channel and extended XPSMCM modular safety controller ([see page 20](#))


Implementation

You can implement single-channel or dual-channel configurations. Route the input wiring for the direction 1 or direction 2 activation terminal and the corresponding ground, through the safety processing device.

Dual-Channel Applications with a TM3SAC Safety Processing Device

This dual-channel safety chain application uses the following modules:

- Emergency stop or guard
- TM3SAC safety processing device
- STO TeSys H motor starter

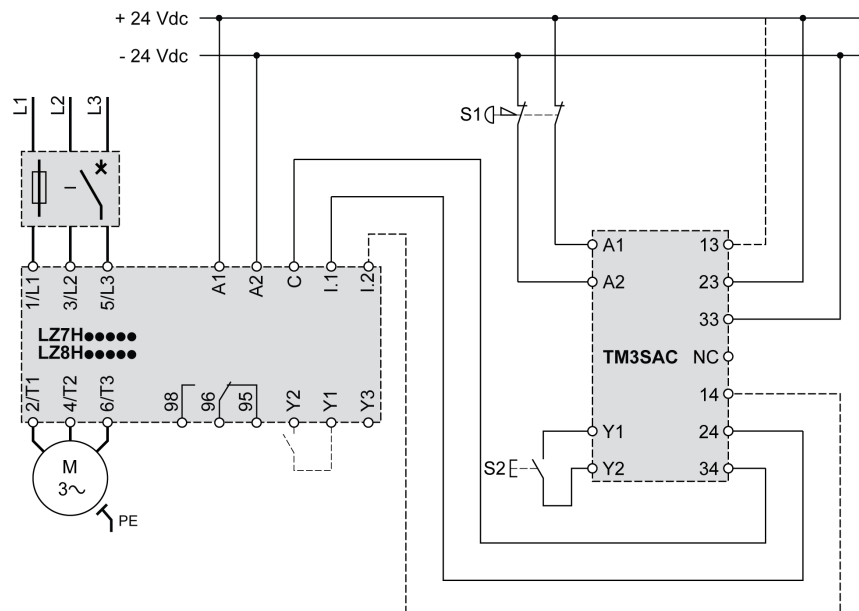

S1 Emergency stop button with two NC contacts, Harmony XB4 or safety limit switches Preventa XCS.


S2 Start button.

NOTE: When TM3SAC terminals **Y1-Y2** are jumpered, the motor starter restarts automatically.

Dual-Channel Applications with a TM3SAF53 Safety Processing Device

This dual-channel safety chain application uses the following modules:

- Emergency stop or guard
- TM3SAF53 safety processing device
- STO TeSys H motor starter

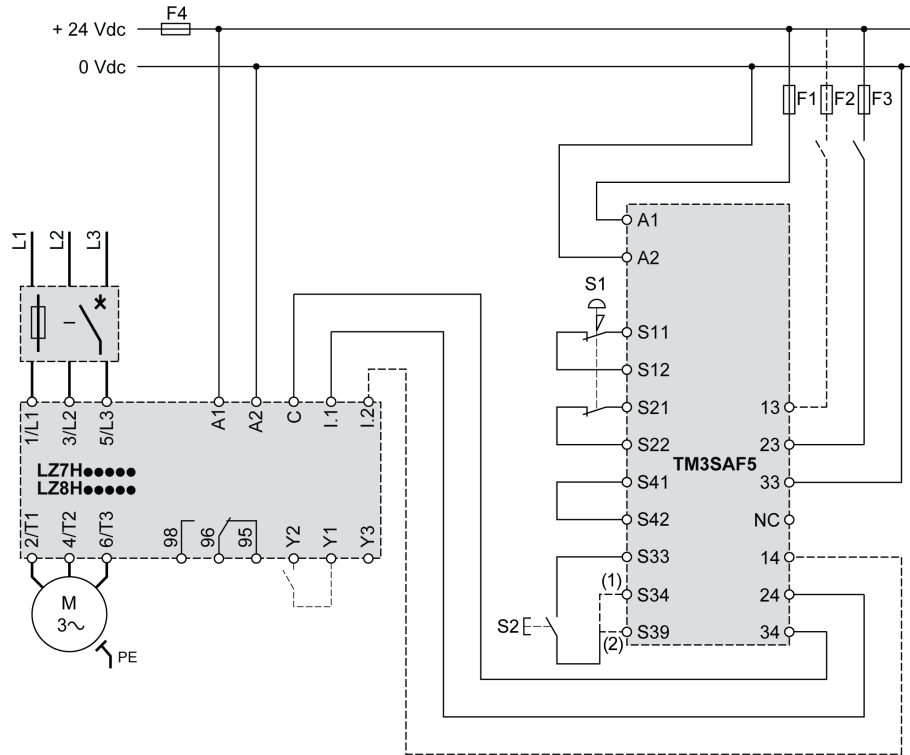


- S1** Emergency STOP button with two NC contacts, Harmony XB4 or Preventa XCS safety limit switches
- S2** Start button: (1) monitored start, (2) non-monitored start

NOTE: When **S33-S39** are jumpered, the motor starter restarts automatically.

Dual-Channel Input and Single-Channel Output with an XPSAC Safety Processing Device

This dual-channel input, single-channel output safety chain application, uses the following modules:

- Emergency stop or guard
- Preventa XPSAC safety processing device
- STO TeSys H motor starter

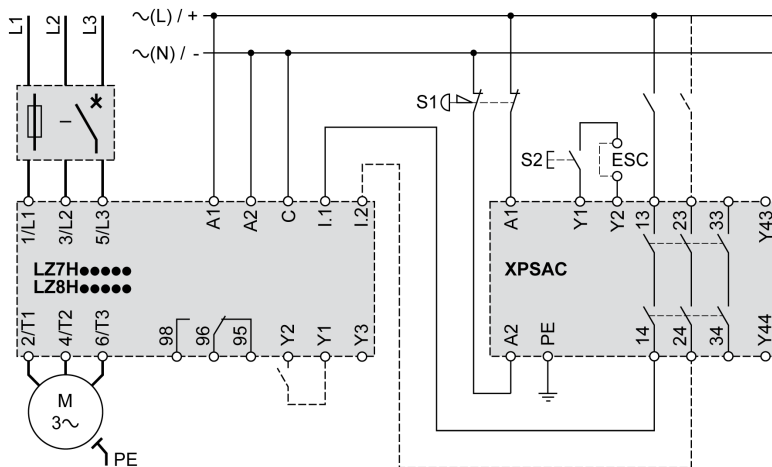


- S1** Emergency STOP pushbutton with two NC contacts
- S2** Start button
- ESC** External start conditions

Dual-Channel Input and Dual-Channel Output with an XPSAF Safety Processing Device

This dual-channel input, dual-channel output safety chain application uses the following modules:

- Emergency stop or guard
- Preventa XPSAF safety processing device
- STO TeSys H motor starter

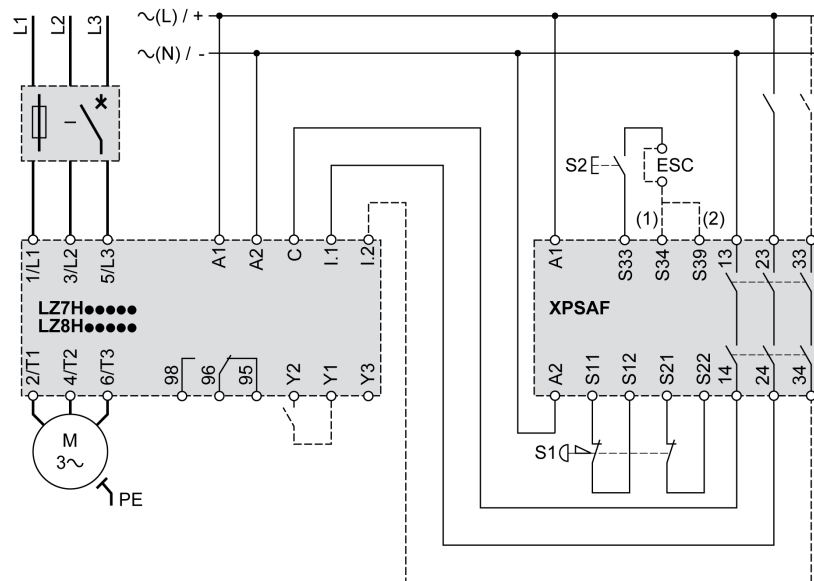

S1 Emergency STOP pushbutton with two NC contacts


S2 Start button

ESC External start conditions: (1) with monitoring of the start button, (2) without monitoring of the start button

Dual-Channel and XPSMCM Modular Safety Controller

This dual-channel safety chain application uses the following modules:


- Emergency stop or guard
- XPSMCM modular safety controller
- STO TeSys H motor starter

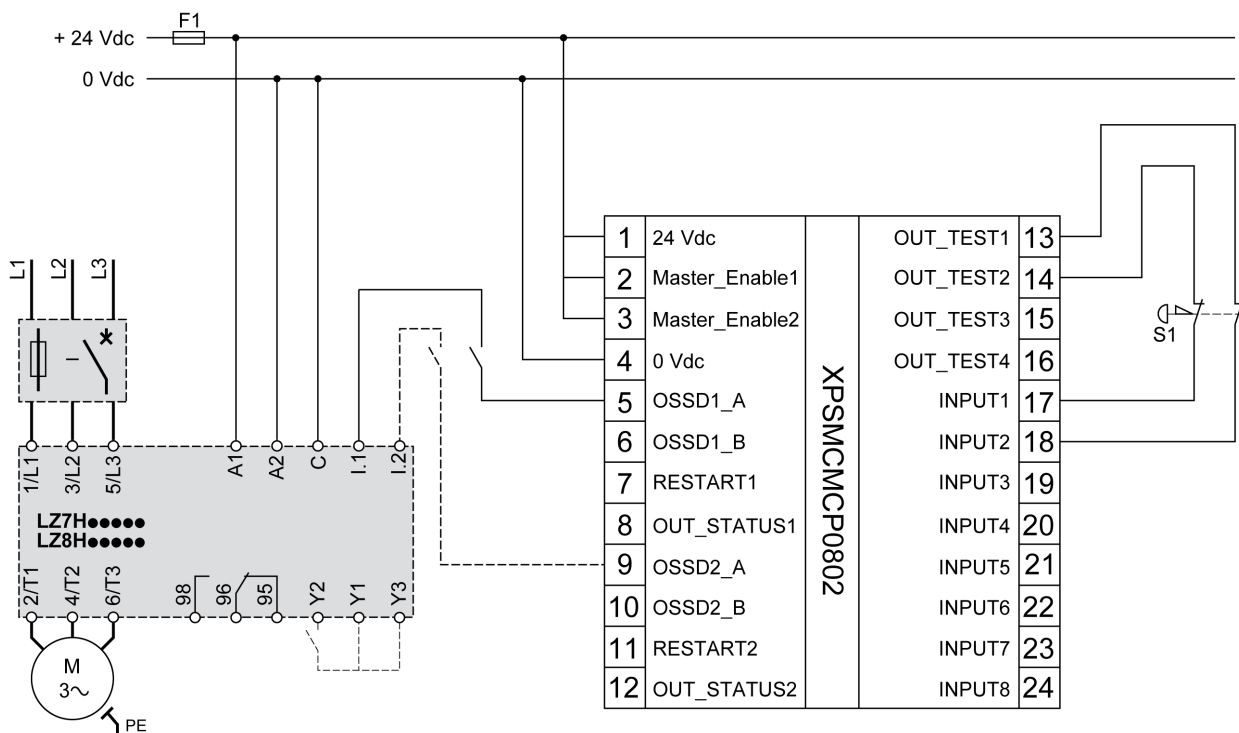

Dual-Channel and Extended XPSMCM Modular Safety Controller

This dual-channel safety chain application uses the following modules:

- Emergency stop or guard
- Extended XPSMCM modular safety controller
- STO TeSys H motor starter

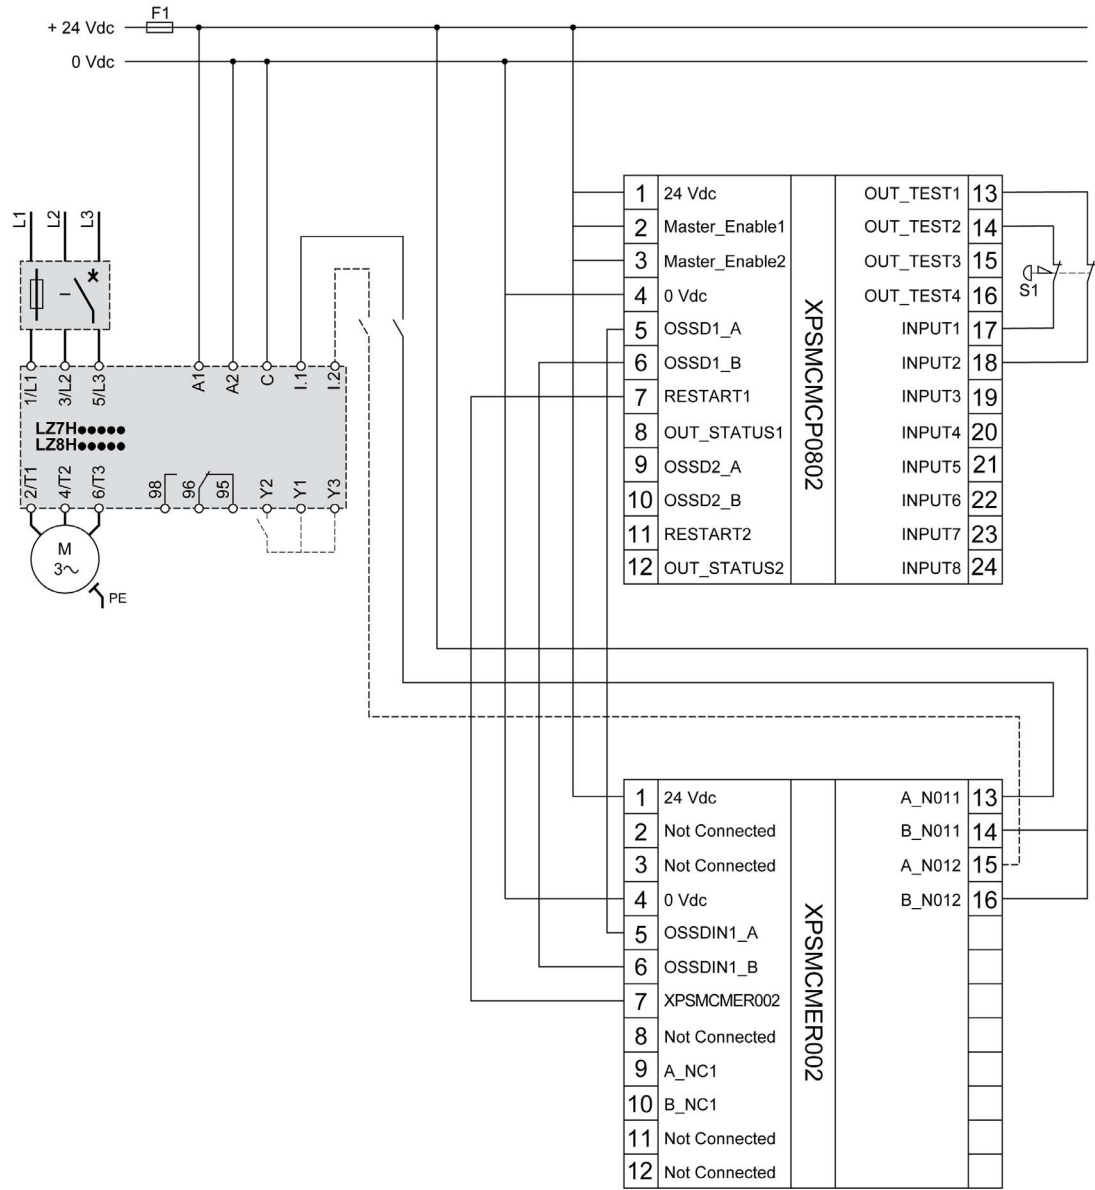

Additional Circuits for Motor Control in Safety Chain Applications Using an STO TeSys H Motor Starter

Overview

NOTICE

DAMAGE TO MOTOR

Connect the TeSys H motor starter as specified in the wiring diagrams.

Failure to follow these instructions can result in equipment damage.

This section provides additional circuits for safe shutdown of motors that use an STO TeSys H motor starter. In these additional circuits, shutdown is achieved by cutting off the power supply on terminal **A1** or **A2**. Repeated shutdown of applications that use these circuits reduces the electrical life of the motor starter to 10,000 cycles.

The circuits in this section are for emergency situations. As soon as the emergency stop button is pushed, the supply voltage is cut off with a safety processing device. The motor voltage is cut off 25 ms after the rated control voltage is cut off.

The following shutdown applications are included in this section:

- Dual-channel input and single-channel output with an XPSAC safety processing device ([see page 21](#))
- Dual-channel input and dual-channel output with an XPSAC safety processing device ([see page 22](#))

Implementation


If cross-error exclusion is not allowed, cut off the supply voltage with a dual-channel or two-pole configuration.

The supply voltage to the motor starter is cut off with a single-channel configuration. Therefore, use this type of installation for SIL 3 (category 3, category 4) **only** if cross-error exclusions are allowed. For example, use this type of installation when the motor starter and the safety processing device are installed in the same control panel.

Dual-Channel Input and Single-Channel Output with an XPSAC Safety Processing Device

This dual-channel input, single-channel output, safety chain application uses the following modules:

- Emergency stop
- Preventa XPSAC safety processing device
- STO TeSys H motor starter

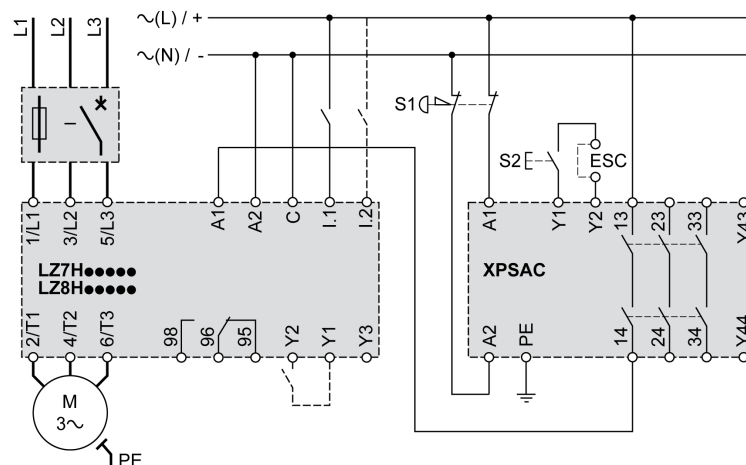

S1 Emergency stop button with two NC contacts

S2 Start button


ESC External start conditions

NOTE: When XPSAC terminals **Y1-Y2** are jumpered, the motor starter restarts automatically.

Dual-Channel Input and Dual-Channel Output with XPSAC Safety Processing Device

This dual-channel input, dual-channel output, safety chain application uses the following modules:

- Emergency stop
- Preventa XPSAC safety processing device
- STO TeSys H motor starter

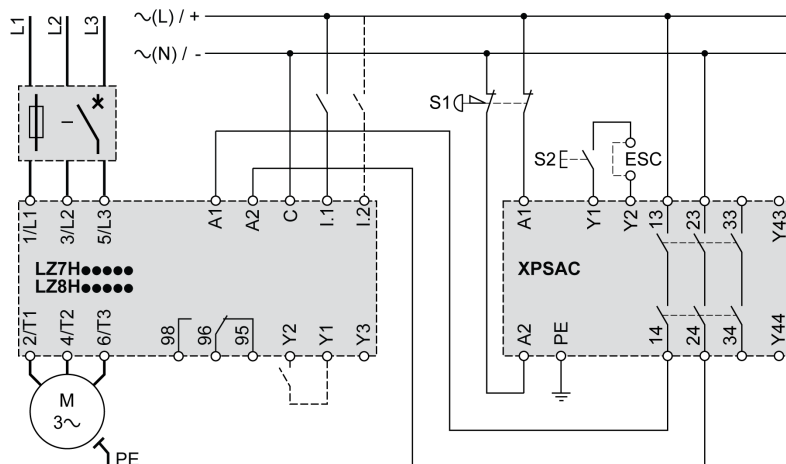

S1 Emergency stop button with two NC contacts

S2 Start button

ESC External start conditions

NOTE: When XPSAC terminals **Y1-Y2** are jumpered, the motor starter restarts automatically.

Motor Control Using a Standard or STO Motor Starter for Motors with Brake

Overview

CAUTION

OVERHEATING

When you connect and operate motors with built-in brakes, be aware of the risk of overheating. The energy to release the brakes is taken from the motor connection cables, which can cause asymmetrical power consumption and result in overheating.

Failure to follow these instructions can result in injury or equipment damage.

CAUTION

UNINTENDED EQUIPMENT OPERATION

Add the brake's rated operational to the current monitoring value for the motor current. Configure the setting according to the motor starter.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

DAMAGE TO MOTOR

Connect the TeSys H motor starter as specified in the wiring diagrams.


Failure to follow these instructions can result in equipment damage.

This section provides circuits for motors with a brake. The wiring diagram you use depends on voltage supply of the brake, either 230 Vac or 400 Vac.

Activate external brakes by using a separate contactor, such as TeSys D.


Three-Phase Motor Control with a 230 Vac Brake

The current for braking is taken from one phase and the neutral conductor. Connect the brake to the phase that goes to **T2** and neutral.

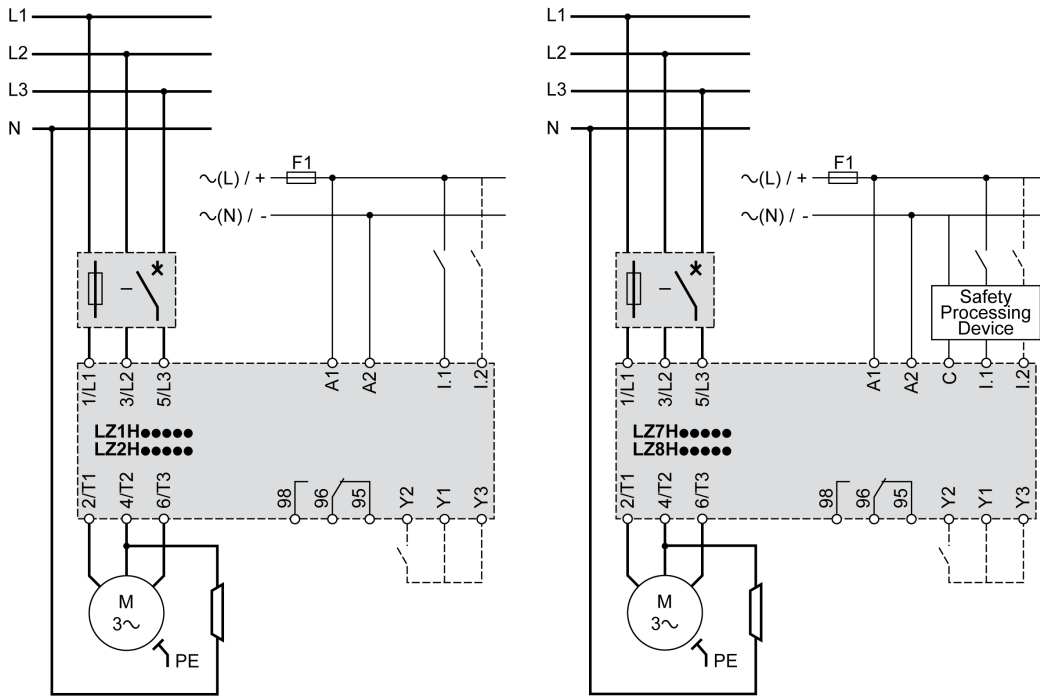

Three-Phase Motor Control with a 400 Vac Brake

The current for braking is taken from two phases. Connect the brake to the phases that goes to **T1** and **T3**.

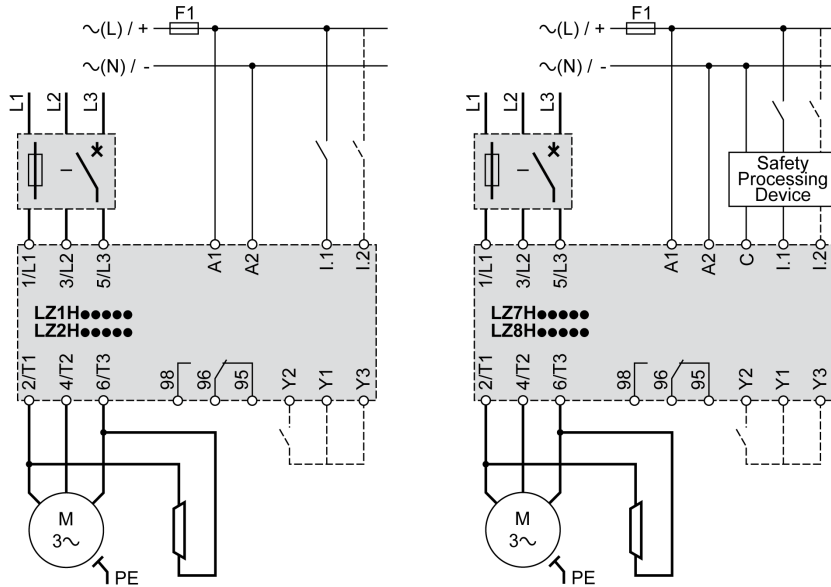

Chapter 3

Operation

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Commissioning	26
Diagnostic Functions	28
Resetting the TeSys H Motor Starter	30
Protecting the Environment	31

Commissioning

Power-Up

When you connect the TeSys H motor starter to the control supply, the four LEDs flash for 1 s, stay lit for 1 s, and then go off. The location of the LEDs is shown in the product description ([see page 11](#)).

When you set the nominal current for the first time, the LEDs light up as indicated in the following procedure. When you change the nominal current, the behavior of the TeSys H motor starter and the sequence of LEDs depend on the state of the TeSys H motor starter.

⚠ WARNING
RISK OF INADEQUATE MOTOR PROTECTION
The current setting of the TeSys H motor starter must be adapted in accordance with the motor to be protected.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting the Nominal Current for the First Time

Before you start the following procedure, make sure that the following conditions are met:

- The TeSys H motor starter is powered up.
- The **110–230 Vac** or **24 Vdc** LED is on and the other LEDs are off.
- No run commands are on control inputs **I1** or **I2**.

Step	Action
1	Lift the cover on the front of the TeSys H motor starter to access the SET/RESET button.
2	Press and hold down the SET/RESET button for at least 6 s. After 6 s the 110–230 Vac or 24 Vdc LED flashes once.
3	Release the SET/RESET button.
4	Turn the potentiometer to select an approximate nominal current, and then fine-tune the position until the LEDs indicate the exact nominal current that you want. The LEDs light up in a combination that indicates the nominal current. See the table of LED combinations and corresponding nominal current (see page 27).
5	Press the SET/RESET button to save the selected nominal current. The 110–230 Vac or 24 Vdc LED comes on and the other LEDs go off.
6	Drop the cover back over the front of the TeSys H motor starter.

NOTE: The factory setting for LZ.H2X4 is 0.18 A. The factory setting for LZ.H6X5 is 1.5 A.

Changing the Nominal Current

Before you start, make sure that the following conditions are met:

- The TeSys H motor starter is powered up.
- The **110–230 Vac** or **24 Vdc** LED is on and the other LEDs are off.
- No run commands are on control inputs **I1** or **I2**.

Step	Action
1	Lift the cover on the front of the TeSys H motor starter to access the SET/RESET button.
2	Press and hold down the SET/RESET button for at least 6 s. When you are holding the button down, the LEDs flash in a combination that indicates the normal current.
3	Release the SET/RESET button. The LEDs stay lit.
4	Turn the potentiometer to select an approximate nominal current, and then fine-tune the position until the LEDs indicate the exact nominal current that you want. See the table of LED combinations and corresponding nominal current (see page 27).
5	Press the SET/RESET button to save the selected nominal current. The 110–230 Vac or 24 Vdc LED comes on and the other LEDs go off.
6	Drop the cover back over the front of the TeSys H motor starter.

Checking the Nominal Current

Before you start, make sure that the following conditions are met:

- The TeSys H motor starter is powered up.
- The **TRIP/ERR** LED is off.
- No run commands are on control inputs **I1** or **I2**.



Step	Action
1	Lift the cover on the front of the TeSys H motor starter to access the SET/RESET button.
2	Press and hold down the SET/RESET button for 2–5 s. When you are holding the button down, the LEDs flash in a combination that indicates the nominal current. See the table of LED combinations and corresponding nominal current (<i>see page 27</i>). NOTE: If you hold down the SET/RESET button for more than 6 seconds, you start the procedure to set the nominal current after the first time (<i>see page 26</i>).
3	Drop the cover back over the front of the TeSys H motor starter.

LED Combination and Corresponding Nominal Current

The following symbols indicate whether an LED is on or off.

LED off

LED on

Current/LED name	Nominal current/LED combination															
	0.18	0.25	0.41	0.56	0.71	0.87	1.02	1.17	1.33	1.48	1.63	1.79	1.94	2.09	2.25	2.4
110–230 Vac or 24 Vdc	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
TRIP/ERR	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Setting range 0.18 A...2.4 A	0.18	0.25	0.41	0.56	0.71	0.87	1.02	1.17	1.33	1.48	1.63	1.79	1.94	2.09	2.25	2.4
Setting range 1.5 A...9 A	1.5	2	2.5	3	3.5	4	4.5	5	5.5	6	6.5	7	7.5	8	8.5	9

Diagnostic Functions

Overview

Use diagnostic functions to find the state of the TeSys H motor starter and understand the cause of tripping. When there is a detected error or trip condition, the device is in a safe, disconnected state.

Internal errors cannot be reset and are stored in the device. If more than 14 internal errors are detected, you can no longer operate the device.

Before you can leave the safe, disconnected state, you must reset the trip condition. To reset an external error, push the **SET/RESET** button and release it within 2 s.







The tables in this section describe the combination of LED states, position of signaling contacts, and reset possibilities, in normal conditions and trip or error conditions. The following symbols indicate whether an LED is on, off, or flashing.

LED on





LED off

LED flashing at approximately 2 Hz (50:50)







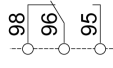
Diagnostics for Normal Conditions

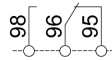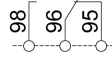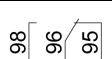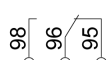Description	LED combination				Signaling contact	Reset
	110–230 Vac or 24 Vdc	TRIP/ERR	 2	 1		
Off Not connected to the control supply, or control supply is off.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		—
Ready to start Supply voltage is available. No trip or detected error. The motor starter switches on when a run command is given.	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		—
Running in direction 1 A command is on I2.	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		—
Running in direction 2 A command is on I1.	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>		—

Diagnostics for Internal Error Conditions

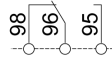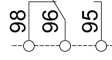Description	LED combination				Signaling contact	Reset
	110–230 Vac or 24 Vdc	TRIP/ERR	 2	 1		
Internal error detected. The device must be replaced.	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		Not possible
Checksum error during determination of the thermal system state. The reset mode must be manual or remote. The device does not reset if the reset mode is automatic.	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		Possible

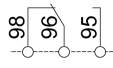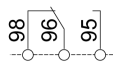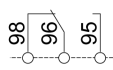



Diagnostics for Trip Conditions

Description	LED combination				Signaling contact	Reset
	110–230 Vac or 24 Vdc	TRIP/ERR	 2	 1		
Thermal overload protection function						
Overload trip occurred while the motor was running in direction 2. Time to reset is counting down. Reset is impossible.	■	⊠	■	□		Not possible
Overload trip occurred while the motor was running in direction 1. Time to reset is counting down. Reset is impossible.	■	⊠	□	■		Not possible
Overload trip occurred while the motor was running in direction 2. Cool down period is in progress. If reset mode is manual or remote, reset is possible. If reset mode is automatic, device resets automatically after the cool down period (20 minutes).	■	⊠	⊠	□		Possible
Overload trip occurred while the motor was running in direction 1. Cool down period is in progress. If reset mode is manual or remote, reset is possible. If reset mode is automatic, device resets automatically after the cool down period (20 minutes).	■	⊠	□	⊠		Possible
Phase unbalance						
The motor currents differ from each other by more than 33 %. Manual or remote reset is possible immediately.	■	⊠	□	□		Possible

Diagnostics for Error Conditions

The following events can cause error conditions:

- Two or more phases are missing.
- No connected motor.
- The motor current is lower than the minimum configurable current for more than 2 seconds, on at least two phases.

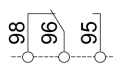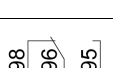Description	LED combination				Signaling contact	Reset
	110–230 Vac or 24 Vdc	TRIP/ERR	 2	 1		
Error occurred while the motor was running in direction 2. When the phases return, the error is cleared automatically.	⊠	⊠	■	□		Not required
Error occurred while the motor was running in direction 1. When the phases return, the error is cleared automatically.	⊠	⊠	□	■		Not required

Resetting the TeSys H Motor Starter

Manual Reset with the SET/RESET Button

To reset the TeSys H motor starter manually, lift the cover and press the **SET/RESET** button on the front of the device.

Wait for at least 2 minutes after the motor starter has tripped before you reset it.

Remote Reset by a Normally Open (NO) Contact

To reset the TeSys H motor starter remotely, connect a **NO** contact between terminals **Y1** and **Y2**.

Wait for at least 2 minutes after the starter motor has tripped before you reset it.

Automatic Reset

To reset the TeSys H motor starter automatically, jumper the **Y1** and **Y3** terminals.

The motor starter resets automatically after 20 minutes. After 2 minutes, you can reset the motor starter manually or remotely.

 WARNING
AUTOMATIC START HAZARD <ul style="list-style-type: none">● A motor connected to the circuit might start automatically in auto restart position.● For applications in the Ex-protection area, automatic restart is not permitted.● For emergency stop applications, the motor must be prevented from restarting automatically by a higher-level control system. Failure to follow these instructions can result in death, serious injury, or equipment damage.

Protecting the Environment

Package Recycling

The packaging materials from this equipment can be recycled. Help to protect the environment by recycling them in appropriate containers.

Thank you for playing your part in protecting the environment.

End-of-Life Recycling

This product has been optimized to decrease the amount of waste and valorize the components and materials of the product in the usual end of life treatment process.

The design has been achieved so that components are able to enter the usual end-of-life treatment processes as appropriate: depollution if recommended, reuse and/or dismantling if recommended to increase the recycling performances, and shredding for separating the rest of materials.

Appendices



What Is in This Appendix?

The appendix contains the following chapters:

Chapter	Chapter Name	Page
A	Combining the TeSys H Motor Starter with Circuit Breakers or Fuses	35
B	Technical Data	39
C	Tripping and Derating Characteristics	45

Appendix A

Combining the TeSys H Motor Starter with Circuit Breakers or Fuses

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Combining the TeSys H Motor Starter with Circuit Breakers	36
Combining the TeSys H Motor Starter with Fuses	38

Combining the TeSys H Motor Starter with Circuit Breakers

Overview

⚠ WARNING
HAZARDOUS VOLTAGE AT THE MOTOR
<ul style="list-style-type: none"> • Check the safety function each time the TeSys H motor starter trips. • After every short-circuit, in the case of short-circuit protection according to type-1 coordination, a TeSys H motor starter may be defective. Replace it before restarting.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

For use in North America

⚠ WARNING
RISK OF FIRE OR ELECTRIC SHOCK
<ul style="list-style-type: none"> • The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. • To reduce the risk of fire or electric shock, current-carrying parts and the other components of the controller should be examined and replaced if damaged.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

The TeSys H motor starter can be combined with the following magnetic motor circuit breakers:

- GV2L: rotary knob type Ue = 500 V
- GV2LE: rocker lever type Ue = 415 V

Type-1 Coordination According to IEC/EN 60947-4-2 for 415 V Maximum Voltage

TeSys H motor starter	Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
LZ.2X4.	50	GV2L/GV2LE04	0.63
LZ.2X4.	50	GV2L/GV2LE05	1
LZ.2X4.	50	GV2L/GV2LE06	1.6
LZ.2X4.	35	GV2L/GV2LE07	2.5
Data is valid at 40 °C			

TeSys H motor starter	Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
LZ.6X5.	50	GV2L/GV2LE06	1.6
LZ.6X5.	35	GV2L/GV2LE07	2.5
LZ.6X5.	12.5	GV2L/GV2LE08	4
LZ.6X5.	8	GV2L/GV2LE10	6.3
LZ.6X5.	7	GV2L/GV2LE14	10
Data is valid at 40 °C			

Type-1 Coordination According to IEC/EN 60947-4-2 for 500 V Maximum Voltage

TeSys H motor starter	Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
LZ.2X4.	50	GV2L/GV2LE04	0.63
LZ.2X4.	50	GV2L/GV2LE05	1
LZ.2X4.	50	GV2L/GV2LE06	1.6
LZ.2X4.	15	GV2L/GV2LE07	2.5
Data is valid at 40 °C			

TeSys H motor starter	Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
LZ.6X5.	50	GV2L/GV2LE04	0.63
LZ.6X5.	50	GV2L/GV2LE05	1
LZ.6X5.	50	GV2L/GV2LE06	1.6
LZ.6X5.	15	GV2L/GV2LE07	2.5
LZ.6X5.	10	GV2L/GV2LE08	4
LZ.6X5.	6	GV2L/GV2LE10	6.3
LZ.6X5.	4	GV2L/GV2LE14	10
Data is valid at 40 °C			

Group Protection with Type-1 Coordination According to IEC/EN 60947-4-2 for 415 V Maximum Voltage

This table gives the maximum number of 2.4 A or 6.5 A TeSys H motor starters that can be protected against short circuit by a magnetic motor circuit breaker for 415 V maximum voltage.

Maximum number of TeSys H motor starters		Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
2.4 A	6.5 A			
2 LZ.2X4. maximum	1 LZ.6X5. maximum	8.0	GV2L/GV2LE10	6.3
4 LZ.2X4. maximum	1 LZ.6X5. maximum	7.0	GV2L/GV2LE14	10
5 LZ.2X4. maximum	2 LZ.6X5. maximum	4.0	GV2L/GV2LE16	14
7 LZ.2X4. maximum	2 LZ.6X5. maximum	3.5	GV2L/GV2LE20	18
10 LZ.2X4. maximum	3 LZ.6X5. maximum	3.0	GV2L/GV2LE22	25
13 LZ.2X4. maximum	4 LZ.6X5. maximum	2.5	GV2L/GV2LE32	32

Group Protection with Type-1 Coordination According to IEC/EN 60947-4-2 for 500 V Maximum Voltage

This table gives the maximum number of 2.4 A or 6.5 A TeSys H motor starters that can be protected against short circuit by a magnetic motor circuit breaker for 500 V maximum voltage.

Maximum number of TeSys H motor starters		Iq short circuit current (kA)	Circuit breaker reference	Maximum current at 40 °C (A)
2.4 A	6.5 A			
2 LZ.2X4. maximum	1 LZ.6X5. maximum	6.0	GV2L/GV2LE10	6.3
4 LZ.2X4. maximum	1 LZ.6X5. maximum	4.0	GV2L/GV2LE14	10
5 LZ.2X4. maximum	2 LZ.6X5. maximum	2.5	GV2L/GV2LE16	14
7 LZ.2X4. maximum	2 LZ.6X5. maximum	2.5	GV2L/GV2LE20	18
10 LZ.2X4. maximum	3 LZ.6X5. maximum	2.5	GV2L/GV2LE22	25
13 LZ.2X4. maximum	4 LZ.6X5. maximum	2.0	GV2L/GV2LE32	32

Combining the TeSys H Motor Starter with Fuses

Type-1 Coordination According to IEC/EN 60947-4-2

TeSys H motor starter	I _q short circuit current (kA)	Protection type	Maximum current (A)	Maximum voltage (V)
LZ.2X4.	10	Fuse gG	25	500
LZ.6X5.	10	Fuse gG	25	500
Data is valid at 40 °C.				

For Use in North America: Type-1 Coordination According to IEC/EN 60947-4-2

TeSys H motor starter	I _q short circuit current (kA)	Protection type	Maximum current (A)	Maximum voltage (V)
LZ.2X4.	100	Fuse class J or CC	30	500
LZ.6X5.	100	Fuse class J or CC	30	500
LZ.2X4.	5	Fuse RK5	20	500
LZ.6X5.	5	Fuse RK5	20	500
Data is valid at 40 °C.				

Appendix B

Technical Data

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Technical Data	40
Safety Functions	43

Technical Data

Environmental Characteristics

Characteristic	Description	Value
Rated insulation voltage (Ui)	Conforming to IEC/EN 60947-1 Overvoltage category III Degree of pollution: 2	500 V
Rated impulse withstand voltage (Uimp)	Conforming to IEC/EN 60947-4-2	6 kV (24 Vdc control voltage); 4 kV (110–230 Vac control voltage)
Conformity to standards	–	IEC/EN 60947-4-2 UL 60947-4-1 and the standards used for ATEX (for STO products)
Product certifications	–	CE, cULus, ATEX (for STO products), CCC (ongoing)
Degree of protection	Conforming to IEC/EN 60947-1	IP20
Environment category	Conforming to IEC/EN 60947-1	E
Protective treatment	Conforming to IEC/EN 60068-2-30	TC
Ambient air temperature around the device	Storage	-40 °C to +80 °C (-40 °F to 176 °F)
	Operation Information about ambient temperature is provided in the derating characteristics (see page 47).	-25 °C to +70 °C (-13 °F to 158 °F)
Maximum operating altitude	Without derating	2000 m (6561 ft)
Operating positions - derating curves (see page 47)	Vertical axis (horizontal DIN rail)	+/- 30 °
Flame resistance of plastic parts	Conforming to UL94	V0
	Conforming to IEC/EN 60695-2-12	960 °C (1,760 °F)
Shock resistance 1/2 sine wave = 18 ms	Conforming to IEC/EN 60068-2-27	30 g (30 gn) starter OFF
		30 g (30 gn) starter ON
Vibration resistance 10–150 Hz	Conforming to IEC/EN 60068-2-6	5 g (5 gn) starter OFF
		5 g (5 gn) starter ON
Resistance to electrostatic discharge	Conforming to IEC/EN 61000-4-2	Air discharge: 8 kV
		Contact discharge: 6 kV
Immunity to radiated high-frequency disturbance 80–1 GHz	Conforming to IEC/EN 61000-4-3	20 V/m
Immunity to radiated high-frequency disturbance 1.0–6 GHz (1,0–6 GHz)	Conforming to IEC/EN 61000-4-3	10 V/m
Immunity to fast transient current	Conforming to IEC/EN 61000-4-4	3 kV
Immunity to conducted high-frequency disturbances	Conforming to IEC/EN 61000-4-6	10 V
Radiated emission and conducted	Conforming to CISPR11 and EN55011	Class A
Surge	Conforming to IEC/EN 61000-4-5	1 kV symmetrical, 2 kV asymmetrical






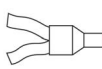


Control and Supply Circuit Characteristics

Characteristic	Description	Value
Rated voltage	AC 50/60 Hz	110–230 V
	DC	24 V
Voltage limits	AC 50/60 Hz	85–253 V
	DC	19.2–30 V
Consumption	–	45 mA for 24 Vdc 12 mA for 230 Vac
Operating time	Switch on	35 ms
	Switch off	40 ms
Voltage dips	–	3 ms
Short time interruptions	–	3 ms

Power Circuit Characteristics

Characteristic	Description	LZ.H2X4	LZH6X5
Power dissipation	–	0.88/4.1 W	0.88/7 W
Rated operating current (see derating curve)	–	0.18–2.4 A	1.5–9 A
AC51	Conforming to IEC/EN 60947-4-3	0.18–2.4 A	1.5–9 A
AC53a	Conforming to IEC/EN 60947-4-2	0.18–2.4 A	1.5–6.5 A
Electrical life	AC51	30,000,000 operations	30,000,000 operations
	AC53A	30,000,000 operations	30,000,000 operations
Maximum operating rate (ON/OFF 50-50)	AC51	7,200 operations/hr	7,200 operations/hr
	AC53A	Maximum Operating Rate for AC53A Duty (see page 48)	Maximum Operating Rate for AC53A Duty (see page 48)
Maximum starting current in AC53A	–	<ul style="list-style-type: none"> ● 52 A for a single product ● 40 A for side-by-side products 	<ul style="list-style-type: none"> ● 52 A for a single product ● 40 A for side-by-side products
Coordination	Conforming to IEC/EN 60947-4-2	Type 1 with circuit breaker	Type 1 with circuit breaker
	Conforming to IEC/EN 60947-4-2	Type 1 with fuses	Type 1 with fuses
Time to restart after overload trip	Manual or remote	2 minutes	2 minutes
	Automatic	20 minutes	20 minutes

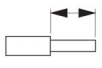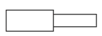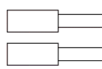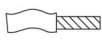Terminal Characteristics

Cable		LZ•H•••••		LZ•H•••3••	
Length of stripped cable		7 mm	0.28 in.	10 mm	0.39 in.
Solid cable without cable end, and 1 conductor		0.25–2.5 mm ²	AWG 24–14	0.25–2.5 mm ²	AWG 24–14
Solid cable without cable end, and with 2 conductors of the same cross section		0.25–0.75 mm ²	AWG 24–20	–	–
Flexible cable without cable end, and with 1 conductor		0.25–2.5 mm ²	AWG 24–14	0.25–2.5 mm ²	AWG 24–14
Flexible cable with cable end and 1 conductor		0.25–2.5 mm ²	AWG 24–14	0.25–2.5 mm ²	AWG 24–14
Flexible cables of the same cross section, connected to a single twin-cable end		0.25–1.5 mm ²	AWG 24–16	0.25–1.5 mm ²	AWG 24–16
Tightening torque		0.5–0.6 N.m	4.4–5.3 lb-in.	–	–
Flat screwdriver		Diameter 3 mm	Diameter 0.125 in.	–	–

Safety Functions

Safety Functions

System conditions	LZ7H or LZ8H 24 Vdc	LZ7H or LZ8H 110/230 Vac
Database for failure rates	SN 29500	SN 29500
System type	Type B	Type B
Standard used	IEC 61508	IEC 61508
Beta factor	1 %	1 %
Mean time to failure (MTTF) at an ambient temperature 40 °C (104 °F)	39.3	39.1

Safe switch-off	LZ7H or LZ8H 24 Vdc	LZ7H or LZ8H 110/230 Vac
Ambient temperature	40 °C (104 °F)	40 °C (104 °F)
Mean time to failure (MTTF)	517	289
Switch-off time	80	100
λ_{sd} [FIT] safe, detectable	664	638
λ_{su} [FIT] safe, undetectable	968	935
λ_{dd} [FIT] dangerous, detectable	218	388
λ_{du} [FIT] dangerous, undetectable	2.67	6.82
SFF [%] Safe failure fraction	99	99
DCS [%] Diagnostic coverage safe	40.7	40.6
DC [%] Diagnostic coverage	98	98
PFH probability of a dangerous failure per hour	2.67×10^{-9}	6.82×10^{-9}
Safety level	IEC/CEI 61508-1: SIL 3 ISO 13849-1: Category 3 PL e EN 60954-1: Category 3	

ATEX certified as associated device for motor protection in zones 1 and 21	LZ7H or LZ8H 24 Vdc	LZ7H or LZ8H 110/230 Vac
Ambient temperature	40 °C (104 °F)	40 °C (104 °F)
Mean time to failure (MTTF)	447	273
Time to trip	As for class 10 A, IEC/CEI 60947-4-2	
λ_{sd} [FIT] safe, detectable	637	636
λ_{su} [FIT] safe, undetectable	870	841
λ_{dd} [FIT] dangerous, detectable	239	402
λ_{du} [FIT] dangerous, undetectable	17	17
SFF [%] Safe failure fraction	99	99
DCS [%] Diagnostic coverage safe	42.3	43.1
DC [%] Diagnostic coverage	93	95
Safety level	IEC/CEI 61508-1: SIL 2	

More safety information is available on request.

NOTICE

RISK OF SWITCH-OFF FUNCTION PROBLEMS

The ATEX switch-off function must be tested once a year for phase loss conditions in L1 or L3. Switch off occurs in 1.5 to 2 seconds.

Failure to follow these instructions can result in equipment damage.

Appendix C

Tripping and Derating Characteristics


What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Tripping Characteristics	46
Derating Characteristics	47
Maximum Operating Rate for AC53A Duty	48

Tripping Characteristics

Tripping Characteristics at 20 °C

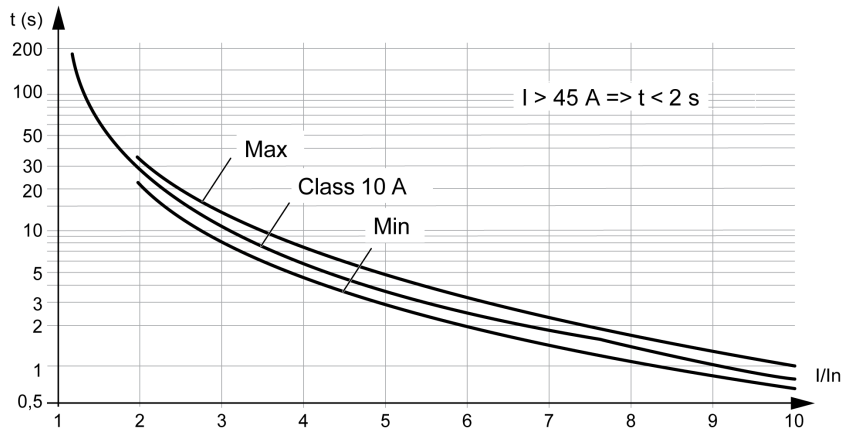


Derating Characteristics

Overview


The curves in this section show the maximum load current for the following parameters:

- Power supply
- Ambient temperature
- Distance between devices

Derating Characteristics for AC53A Duty by Temperature and Mounting Space for 24 Vdc

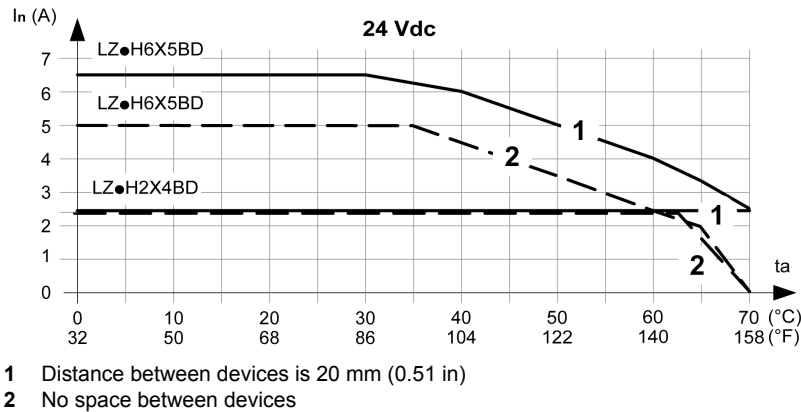

Derating Characteristics for AC53A Duty by Temperature and Mounting Space for 110–230 Vac

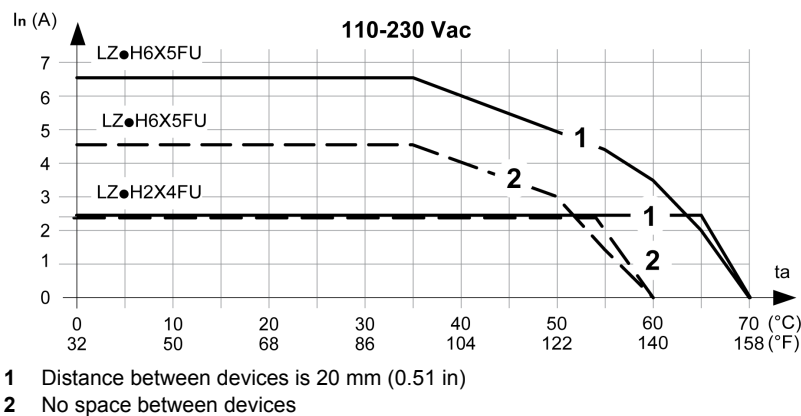

Derating Characteristics for High-Efficiency Motors

TeSys H motor starters are designed for motors with a starting current (I_s) that is eight times the nominal current (I_e), according to IEC 60947-4-2. For these motors, $I_s/I_e = 8$.

The following tables list the maximum nominal current for motors where I_s/I_e is greater than or equal to 8. If necessary, limit the maximum nominal current of these motors.

LX.2X4					
Nominal current (I_e) in A	8	8.5	9	9.5	10
Ratio of maximum starting current to nominal current (I_s/I_e)	2.4	2.4	2.4	2.4	2.4


LX.6X5					
Nominal current (I_e) in A	8	8.5	9	9.5	10
Ratio of maximum starting current to nominal current (I_s/I_e)	6.5	6	5.7	5.5	5.2

Maximum Operating Rate for AC53A Duty


Overview

This section shows the minimum duty cycle versus cycle duration for two typical starting times.


Starting time of 100 ms

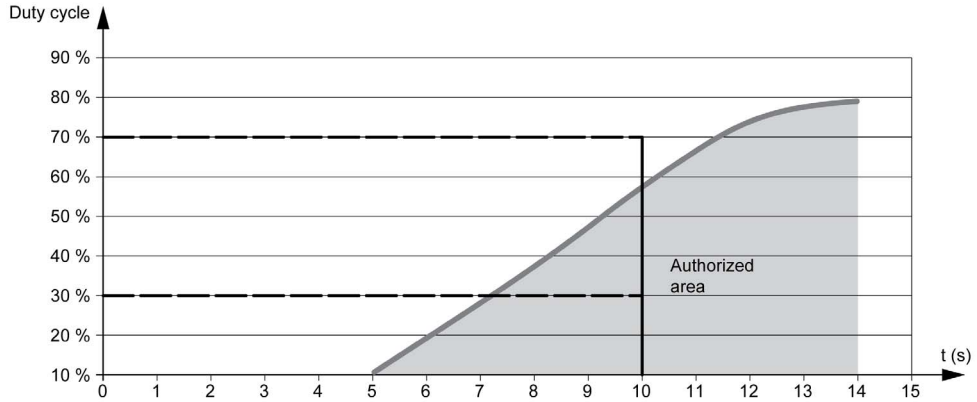

Example for starting time of 100 ms. Start time is defined by the duration of the starting current.

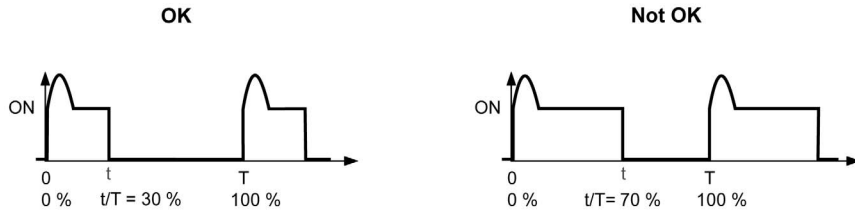

Starting time of 150 ms

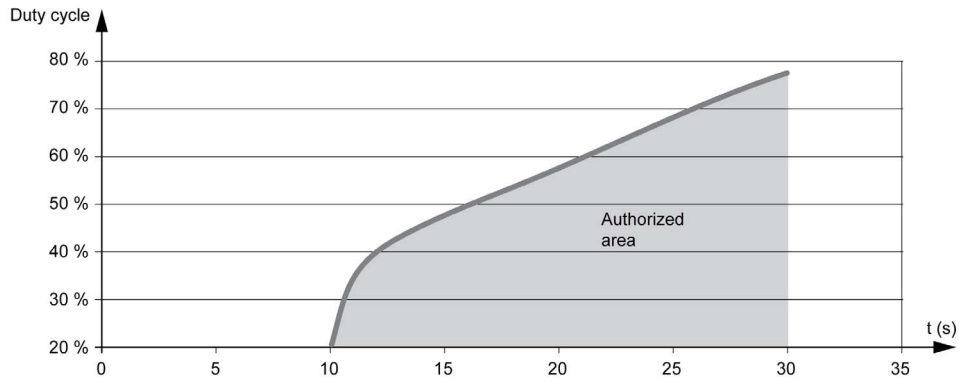



DOCA0111EN-00

Schneider Electric Industries SAS

35, rue Joseph Monier
CS30323
F - 92506 Rueil Malmaison Cedex

www.schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

08/2015